


Dur-A-Flex, Inc.
CRYL-A-STAT ESD-401
GROUND CONNECTION
COLUMN BASE (METAL)
DETAIL MMA ESD-3

Drawing No. 22

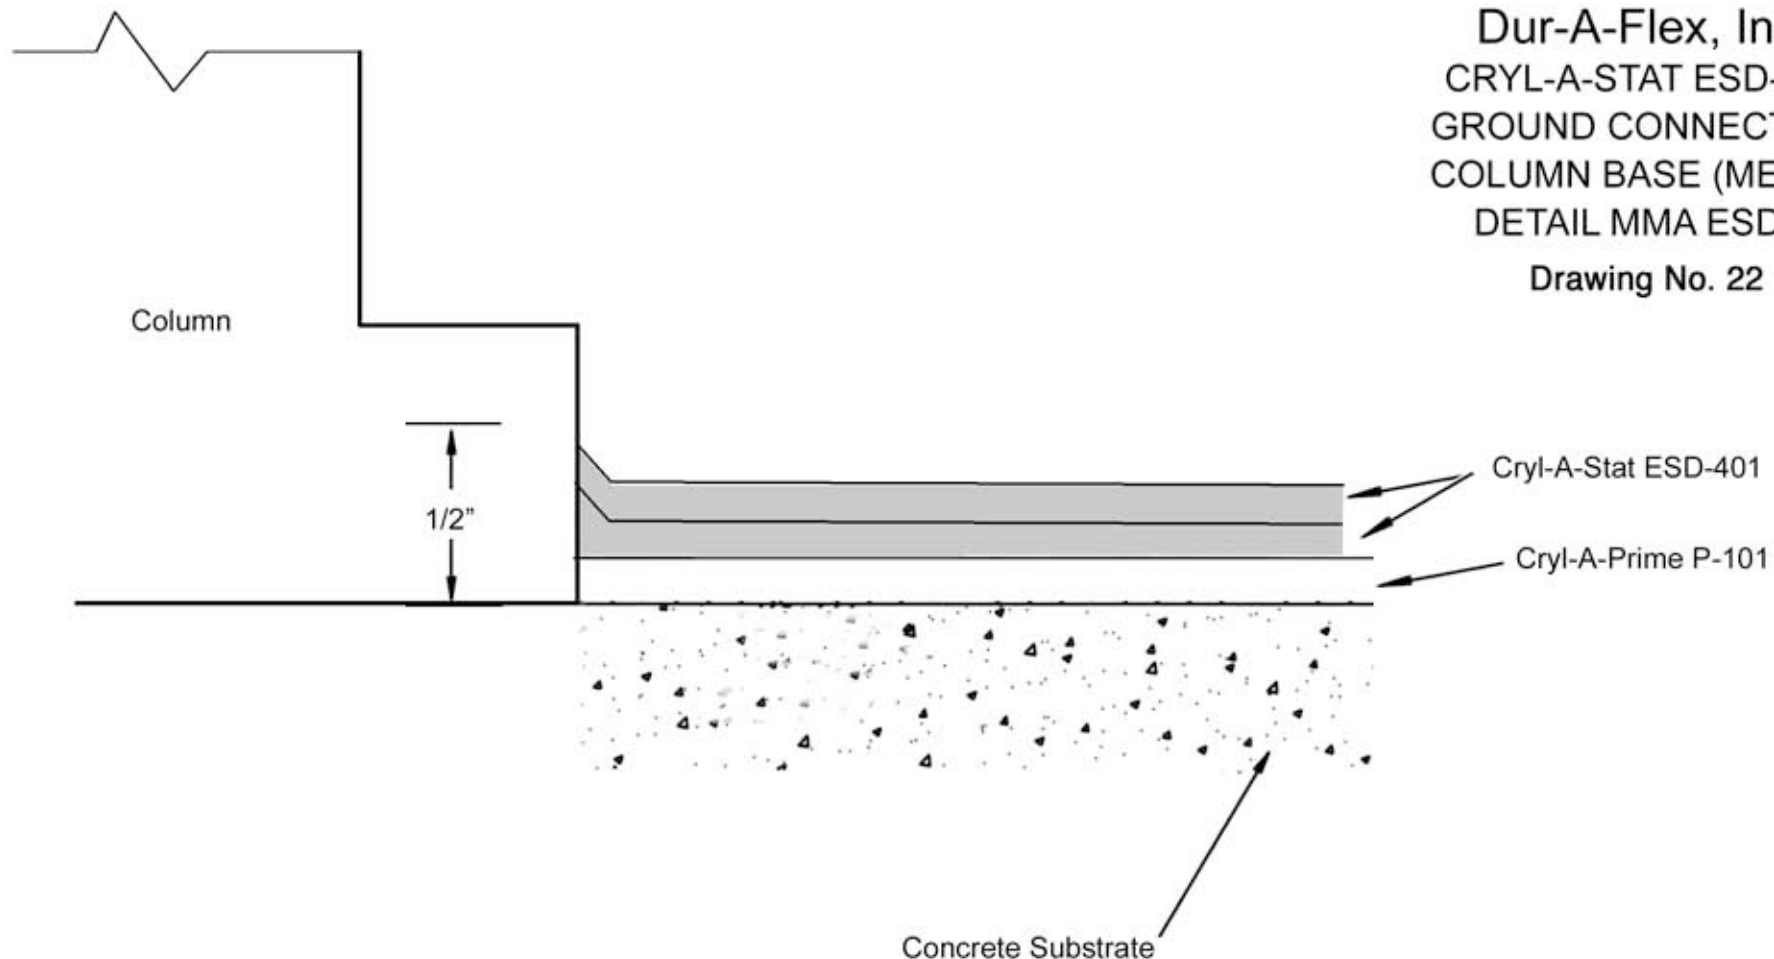

Notes:

1. Grind 1/2 inch of column base from floor to white metal.
2. Apply Cryl-A-Prime P-101 on concrete substrate up to base but not onto metal surface.
3. Apply 2 coats of Cryl-A-Stat ESD-401 up onto clean white metal surface of base.
4. Material to be applied to metal surface within 4 hours of preparation.

REV. DATE: 10/06
SCALE: N.T.S.

(C)1999 DUR-A-FLEX, INC. ALL RIGHTS RESERVED. THE RIGHT TO UTILIZE DUR-A-FLEX DETAILS FOR COMMERCIAL PURPOSES IS GRANTED EXCLUSIVELY TO CONTRACTORS, ARCHITECTS, QUANTITY SURVEYORS, ENGINEERS, AND SPECIFICATION WRITERS. DUR-A-FLEX® AND CRYL-A-FLEX® ARE REGISTERED TRADEMARKS OF DUR-A-FLEX, INC. US & FOREIGN PATENT & TRADEMARK OFFICES. MARCA REGISTRADA. ALL OTHER TRADEMARKS ARE PROPERTY OF THEIR RESPECTIVE COMPANIES.